



SINK MODEL 156 TOP MOUNT INSTALLATION

1. Turn sink upside down on surface to be cut.
2. Trace outline of sink.
3. Cut hole 1/4" smaller than line.
4. Cut on inside of line.

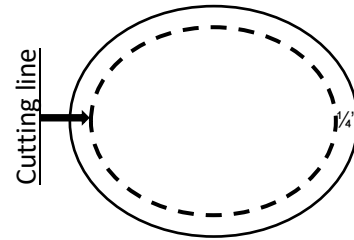

WORK INSTRUCTION FOR ATTACHING SINK TABS

- 1.) Apply a continuous bead of a 100% RTV acetoxysilicone sealant under the rim of the sink as a seal and barrier from water infiltration.
- 2.) Place sink into the cut out hole in the vanity or counter top.
- 3.) Align the rectangle slot of the hold down clamp over the sink post and thread the screw through the rectangle slot of the hold down clamp into the sink post. Reference diagram.
- 4.) Turn the hold down clamp to engage the surface of the counter top and tighten the screw. Do not over tighten.
- 5.) Repeat steps 2 and 3 for the remaining sink posts.

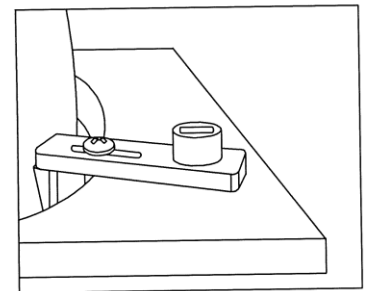

CARE & MAINTENANCE INSTRUCTIONS

- ❖ For routine cleaning, a liquid or paste non-abrasive “fiberglass” type cleaner is recommended.
- ❖ To protect and maintain gloss use an appropriate wax or polish.

WARNING

Some dry cleaning agents and solvents will damage this unit. Burning cigarettes should not be allowed to come into contact with the surface of this unit or damage may ensue.


Manufacturer assumes no liability for improper use and installation.

Proudly made in the U.S.A.

601 County Road 17 | Elkhart, IN 46516 | www.lasallebristol.com


SINK MODEL 156 UNDER MOUNT INSTALLATION

- 1.) Turn sink upside down on surface to be cut.
- 2.) Trace outline of sink.
- 3.) Cut hole 1 1/4" smaller than line.
- 4.) Smooth edges of hole with sandpaper before installing.

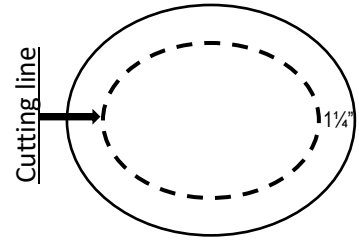

WORK INSTRUCTION FOR ATTACHING SINK TABS

- 1.) Center sink below the cut out hole in the vanity or counter top.
- 2.) Evenly space out tabs around the sink rim. Reference diagram.
- 3.) Tighten the screw. Do not over tighten.
- 4.) Repeat steps 2 and 3 for the remaining sink posts.

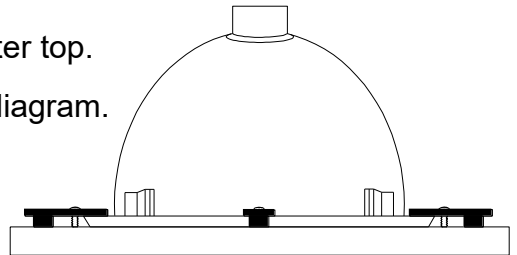

WORK INSTRUCTION FOR GLUING SINK IN PLACE

- 1.) Prepare the countertop for mounting the sink by smoothing the edges of the hole with sandpaper so it won't damage the sink. Clean the dust and any stains from the countertop and the opening with a clean cloth. Be sure to allow surfaces to dry completely after cleaning so the adhesive will be able to work properly.
- 2.) Apply continuous bead (about 1/2") of a 100% RTV acetoxysilicone sealant on top of the flat rim. Adjust position of sink as needed and attach sink tabs while adhesive is drying.
- 3.) Do not connect plumbing for 24 hours allowing sealant to fully cure.

CARE & MAINTENANCE INSTRUCTIONS

- ❖ For routine cleaning, a liquid or paste non-abrasive "fiberglass" type cleaner is recommended.
- ❖ To protect and maintain gloss use an appropriate wax or polish.

WARNING

Some dry cleaning agents and solvents will damage this unit. Burning cigarettes should not be allowed to come into contact with the surface of this unit or damage may ensue.

Manufacturer assumes no liability for improper use and installation.

Proudly made in the U.S.A.

601 County Road 17 | Elkhart, IN 46516 | www.lasallebristol.com



PRINT OUT ON LEGAL SIZE PAPER 8 1/2 X 14

**SINK MODEL 156 UNDER MOUNT
TEMPLATE & INSTALLATION**


Please read through these instructions before starting.

- 1.) Tape template securely to vanity or counter top and cut out top along template line for model.
- 2.) Smooth edges of hole with sandpaper before installing.

WORK INSTRUCTION FOR ATTACHING SINK TABS

- 1.) Center sink below the cut out hole in the vanity or counter top.
- 2.) Evenly space out tabs around the sink rim.

Reference diagram.

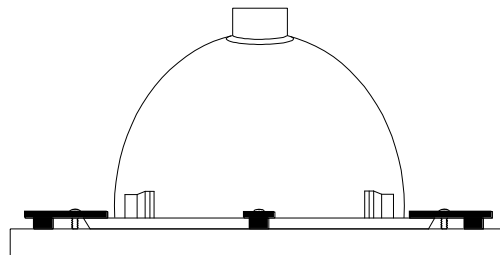

OVERALL LENGTH
11 1/32"

OVERALL WIDTH
7 51/64"

- 3.) Tighten the screw. Do not over tighten.
- 4.) Repeat steps 2 and 3 for the remaining sink posts.

WORK INSTRUCTION FOR GLUING SINK IN PLACE

- 1.) Prepare the countertop for mounting the sink by smoothing the edges of the hole with sandpaper so it won't damage the sink. Clean the dust and any stains from the countertop and the opening with a clean cloth. Be sure to allow surfaces to dry completely after cleaning so the adhesive will be able to work properly.
- 2.) Apply continuous bead (about 1/2") of a 100% RTV acetoxysilicone sealant on top of the flat rim. Adjust position of sink as needed and attach sink tabs while adhesive is drying.
- 3.) Do not connect plumbing for 24 hours allowing sealant to fully cure.

Proudly made in the U.S.A.

601 County Road 17 | Elkhart, IN 46516 | www.lasallebristol.com