


Installation Guide

Can Be Installed Over:



VOG

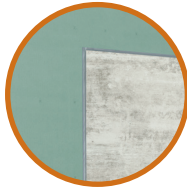

Cement board



Existing ceramic tiles

Panel Edge Types:

Square Edge — 48" panels



Interlocking Edge — 30" and 36" panels



Cutting Options:



Score face side of the panel a few times with a utility knife and snap the tile at the line.




Or




Use a circular saw or table saw with a fine-tooth blade to provide a smooth cut.


Trims in Matching Finishes:

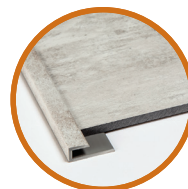

J-Trim

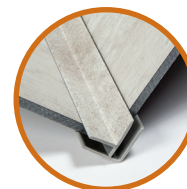

Inside Corner Trim

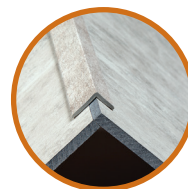


L-Trim

Tools and Materials:

- Protective eye wear
- Measuring tape
- Level
- Utility knife
- Hand saw or circular/table saw
- Drill bit & jig saw (for cutting holes)
- Silicone-based sealant for kitchen/bath (for wet environments)
- Panel adhesive rated for PVC
- Optional: matching trim
- Optional: shims
- Optional: painter's tape

Basic Installation:

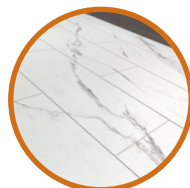

Extra-large panels quickly cover larger areas.



Installation is quick and grout-less using tube adhesive.



Apply panels directly onto wall.

Clean all installation surfaces. Ensure they are dry and free of any dirt, dust or debris prior to installing any wall panels.

Before applying adhesive, dry fit the panels to ensure they fit correctly. Cut any panels as needed to achieve a proper fit.

Apply an even distribution of adhesive to the back of the panel. Using even pressure, press the first panel firmly into place with your hands, making sure the panel is level and flush with the surrounding surfaces. Wipe off excess adhesive.



Continue to install the remaining panels in this manner. If wall panel edges are interlocking, fully insert the panel tongue into the groove of the adjoining panel.

Use a silicone-based sealant to seal the edges of the panels where they meet the bathtub, floor, and ceiling. Allow the adhesive to dry before using the shower or bathtub.

Visit Palisade-tiles.com for comprehensive installation instructions and more.



Tub & Shower Surround Panel Layout Guides

60" Rear x 36" Sides

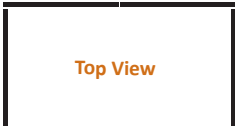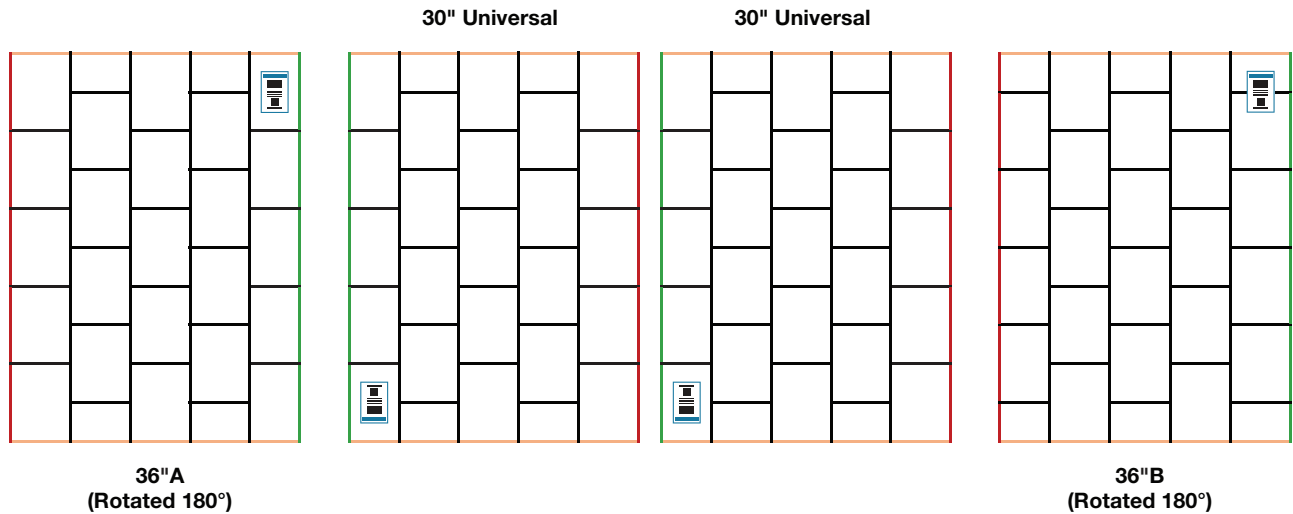

- grout lines
- interlocking tongue
- interlocking groove
- square edge

60" Rear x 30" Sides

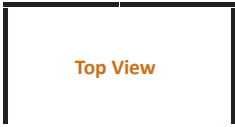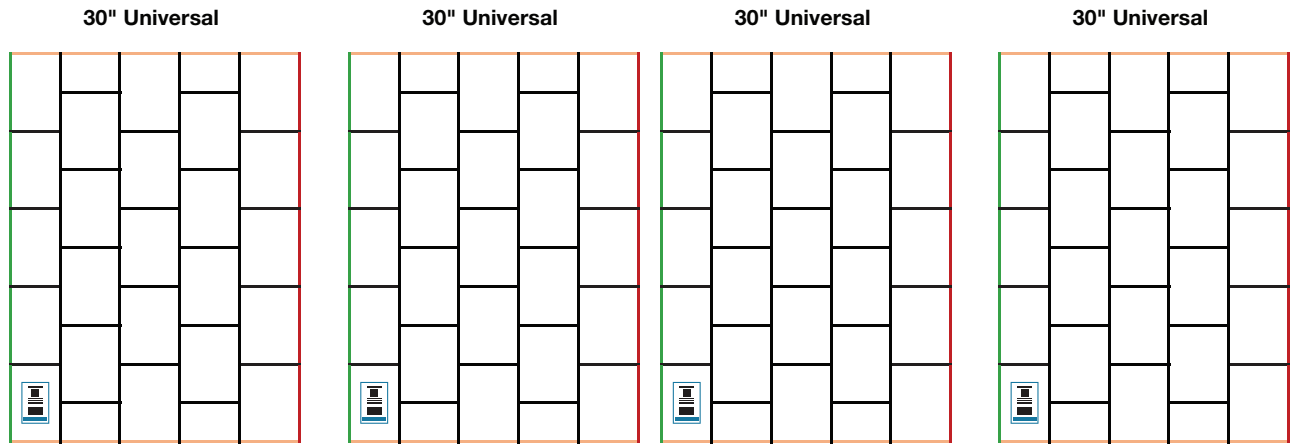


- grout lines
- interlocking tongue
- interlocking groove
- square edge



Tub & Shower Surround Panel Layout Guides

48" Rear x 36" Sides


36" A

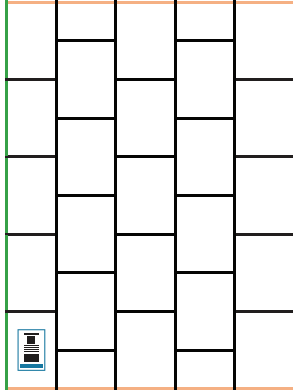

36" B

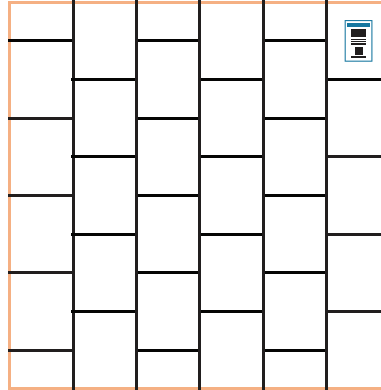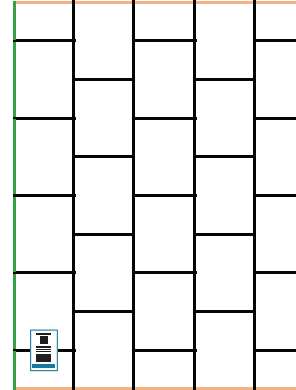


48" Universal (Rotated 180°)

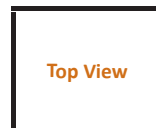



-  grout lines
-  interlocking tongue
-  interlocking groove
-  square edge

48" Rear x 36" Sides


48" Universal

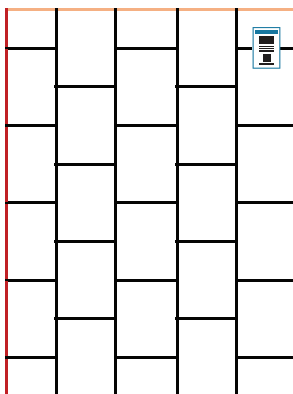

36" B
(Rotated 180°)

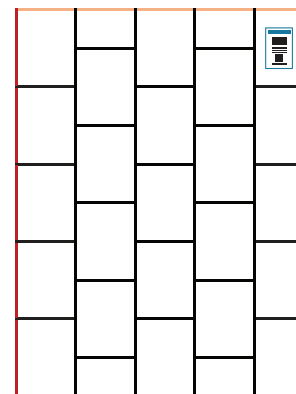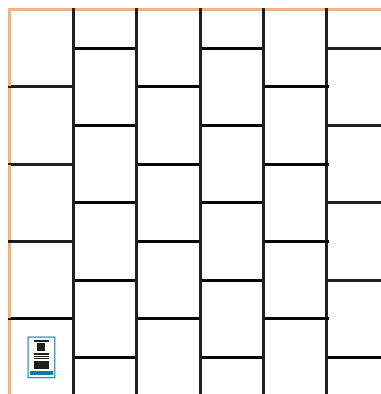

36" A
(Rotated 180°)

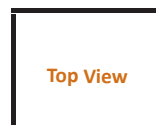

-  grout lines
-  interlocking tongue
-  interlocking groove
-  square edge

Tub & Shower Surround Panel Layout Guides





72" Rear x 48" Sides

48" Universal

36" A

36" B

48" Universal

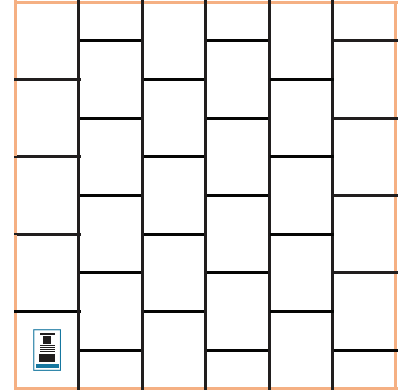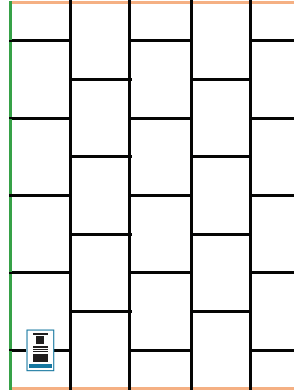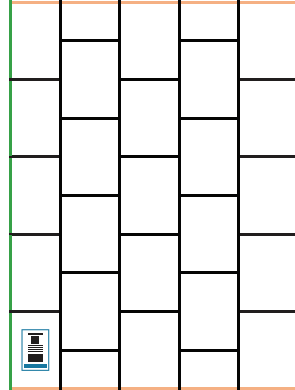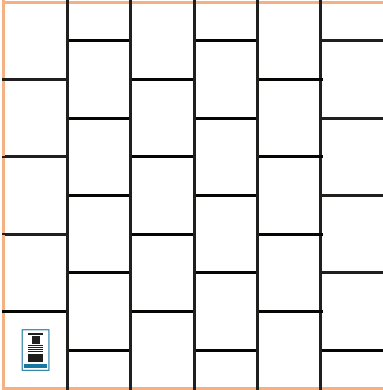





Top View

- grout lines
- interlocking tongue
- interlocking groove
- square edge

72" Rear x 36" Sides


36" A

36" B

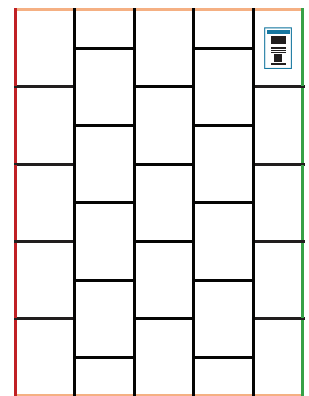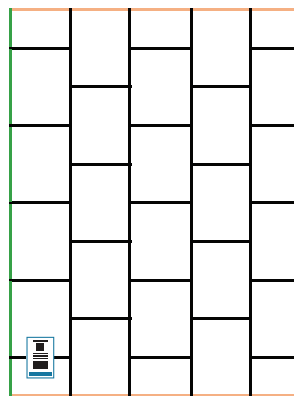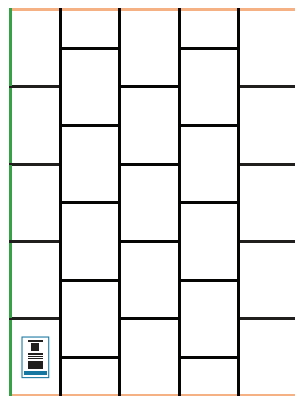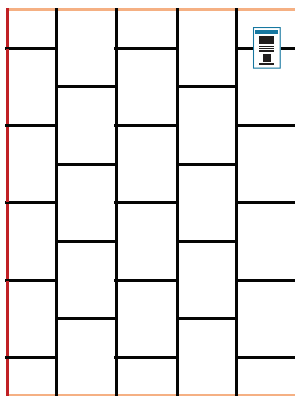

36" B
(Rotated 180°)

36" A
(Rotated 180°)

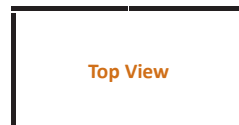

Top View

- grout lines
- interlocking tongue
- interlocking groove
- square edge